


REPLACEMENT PARTS LIST

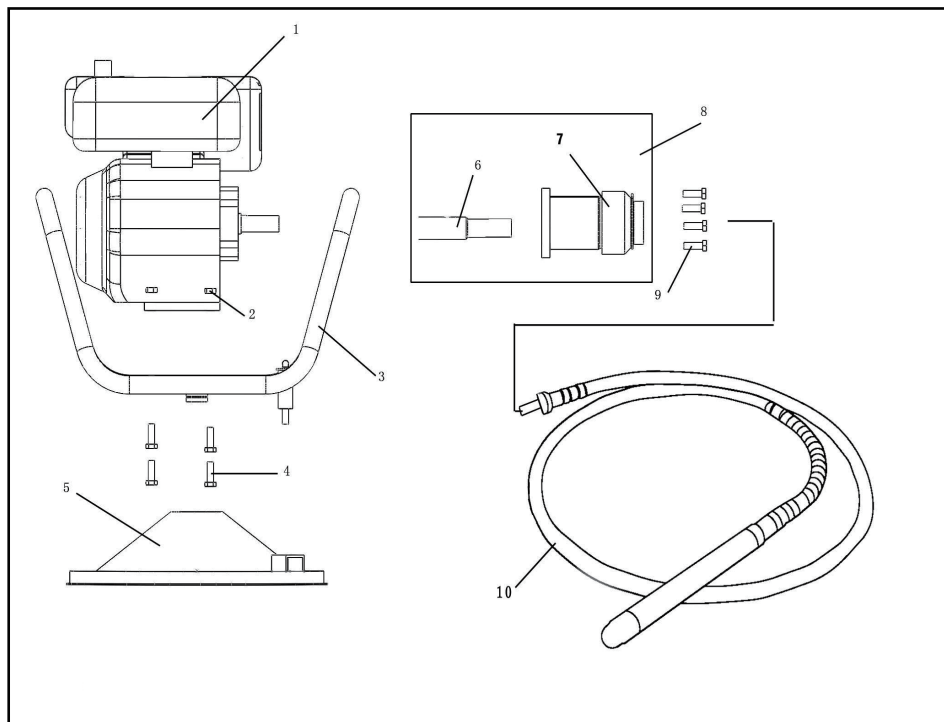

PART NO.	Description	Qty
1	Engine	1
2	Locknut M8	4
3	protective frame	1
4	Hexagonal bolt M8	4
5	Bottom seat	1
6	Coupling shaft(Japanese type)	1
6	Coupling shaft(Danapac type)	1
7	Coupling sleeve (Japanese type)	1
7	Coupling sleeve(Danapac type)	1
8	Coupling assy.(Japanese type)	1
8	Coupling assy.(Danapac type)	1
9	Hexagonal bolt M8x20	4
10	Vibrator poker	1