

Troubleshooting

Problem	Possible Causes	Likely Solutions
Heat Gun will not turn on.	1. Power Switch set at “0”. 2. No power at outlet. 3. Cord not connected.	1. Turn Power Switch to “I” or “II”. 2. Check power at outlet. 3. Check that cord is plugged in.
Unsatisfactory results.	Improper heat setting.	Adjust heat setting (“I” or “II”) for correct application.

**WARNING:**  
Follow all safety precautions whenever diagnosing or servicing the tool. Disconnect power supply before service.

PARTS LIST

Part	Description	Qty
1	power cord	1
2	power cord guard	1
3	cord grip	1
4	screw	4
5	terminal block	1
6	switch	1
7	housing	1
8	tail hood	1
9	screw	9
10	housing	1
11	motor	1
12	motor base	1

Part	Description	Qty
13	screw	2
14	fan blade	1
15	screw	3
16	fan cave	1
17	plastic ring	1
18	thermo-link protector	1
19	heating element assembly	1
20	hexagon socket frame	1
21	micanite paper	1
22	steel tube	1
23	steel ring	1
24	plastic tube	1

### ASSEMBLY DIAGRAM

