


65462 PART LIST & EXPLODING VIEW

Item	Description	QTY
1	Lifting arm	1
2	Side member, left	1
3	Nut	2
4	Spring washer	2
5	Return spring	1
6	Steel ball,bearing	2
7	Caster wheel	2
8	Front wheel	2
9	Spacer front wheel	2
10	Flat washer,12	2
11	Nut, M12	6
12	Spindle,front wheel	1
13	Retaining ring	1
14	Retaining ring	4
15	Mount,saddle	1

Item	Description	QTY
16	Saddle	1
17	Saddle pin	1
18	Retaining ring	2
19	Mount saddle pin	1
20	Spring washer	4
21	Anchor bolt	2
22	Spindle side member	1
23	Carrying handle	1
24	Cover plate	1
25	Handle	1
26	Cross head pin	1
27	Retaining ring	2
28	Hydraulic unit assembly	1
29	Side member, right	1
30	Radius link	2

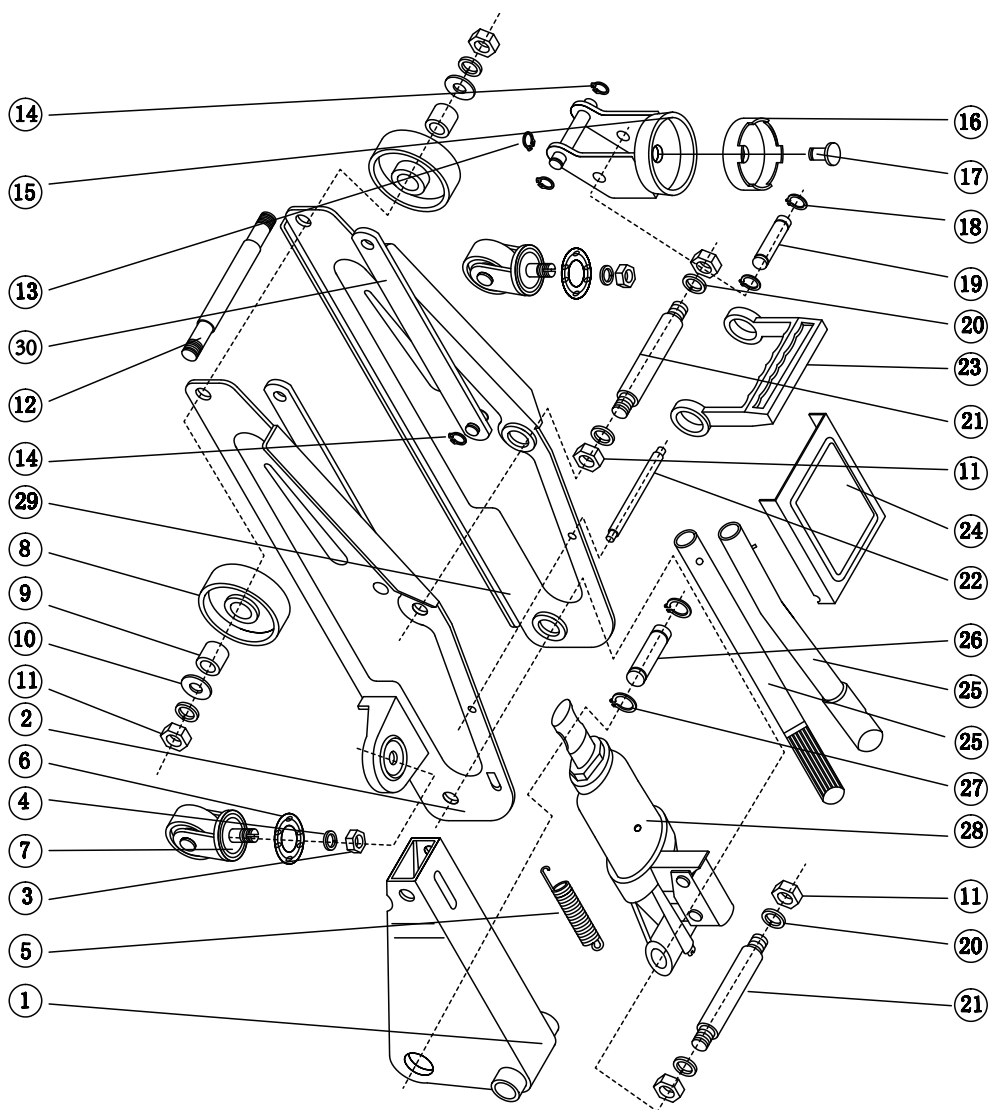

Item	Description	QTY
P01	Piston rod	1
P02	Piston head	1
P03	Back-up ring	1
P04	O-ring seal	1
P05	Cylinder ram	1
P06	Washer	1
P07	Screer filler body	1
P08	Steel ball	1
P09	Body hydraulic unit	1
P10	Steel ball	2
P11	O-ring seal	2
P12	Release valve	1
P13	Screen washer pump	1
P14	Cylinder pump	1
P15	Overload valve adjusting screw	1
P16	Spring	1

Item	Description	QTY
P17	Spring guid overload valve	1
P18	Steel ball	1
P19	Top nut	1
P20	O-ring seal	1
P21	Fiber washer oil chamber	1
P22	Oil chamber	1
P23	Filler plug	1
P24	Fiber washer oil chamber	1
P25	O-ring seal	1
P26	O-ring seal	1
P27	Back-up ring	1
P28	Piston	1
P29	Link piston	1
P30	Connector pin	1
P31	Connector pin	1
P32	Handle sleeve	1
P33	Set pin	2

