


65463 PART LIST & EXPLODING VIEW

Item	Description	QTY
1	Cap	1
2	Handle	1
3	Anchor bolt	2
4	Spindle side member	1
5	Retaining ring	6
6	Radius link	2
7	Cover plate	1
8	Lifting arm	1
9	Retaining ring	2
10	Pin,saddle	1
11	Washer	1
12	Saddle-A	1
13	Side member, right	1
14	Flat washer	6
15	Spring washer	6
16	Nut	6

Item	Description	QTY
17	Spacer front wheel	2
18	Front wheel	2
19	Mount,saddle	1
20	Pin,mount saddle	1
21	Spindle,front wheel	1
22	Cross head pin	1
23	Caster wheel	2
24	Fork,caster wheel	2
25	Spindle,caster wheel	2
26	Bolt,caster wheel	2
27	Steel ball,bearing	2
28	Lock washer	2
29	Nut	2
30	Side member, left	1
31	Return spring	1
32	Hydraulic unit assembly	1

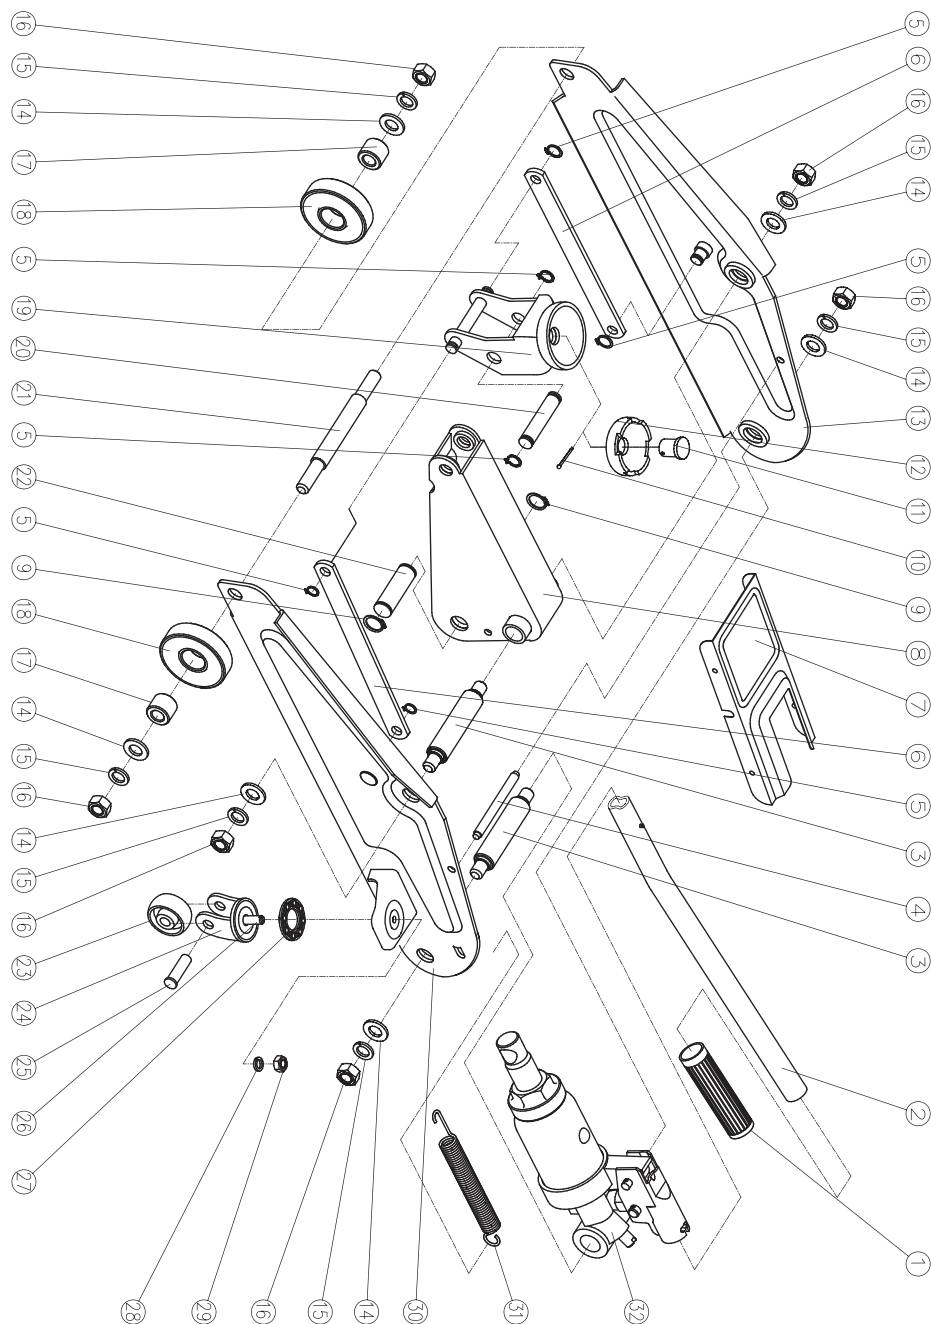

Item	Description	QTY
P01	Piston rod	1
P02	Piston head	1
P03	Back-up ring	1
P04	O-ring seal	1
P05	Cylinder ram	1
P06	Washer	1
P07	Screer filler body	1
P08	Steel ball	1
P09	Body hydraulic unit	1
P10	Steel ball	2
P11	O-ring seal	2
P12	Release valve	1
P13	Screen washer pump	1
P14	Cylinder pump	1
P15	Overload valve adjusting screw	1
P16	O-ring seal	1

Item	Description	QTY
P17	Spring	1
P18	Spring guid overload valve	1
P19	Steel ball	1
P20	Top nut	1
P21	O-ring seal	1
P22	Fiber washer oil chamber	1
P23	Oil chamber	1
P24	Filler plug	1
P25	Fiber washer oil chamber	1
P26	Back-up ring	1
P27	Piston	1
P28	Link piston	1
P29	Connector pin	1
P30	Connector pin	1
P31	Handle sleeve	1
P32	Set pin	2

