

PARTS LIST

No.	Description	No.	Description
1	reverse self-locking button spring	38	motor
2	reverse self-locking button	39	transparency oil tube
3	switch trigger	40	brushless controller
4	switch trigger torsional spring	41	tapping screw
5	transparency protect cover	42	plinth
6	lampshade	43	rubber ring
7	switch connecting rod	44	right housing cover
8	current braker	45	screw
9	right cover for plug in socket	46	barke hinge
10	plug in socket	47	brake steel belt
11	left cover for plug in socket	48	flat washer
12	tapping screw	49	brake tension spring
13	tapping screw	50	split washer
14	microswitch	51	flat washer
15	oil pump subassembly	52	tapping screw
15-1	oil pump	53	flat washer
15-2	piston bush	54	brake flange
15-3	worm	55	tapping screw
15-4	worm teeth	56	brake cover plate
16	tapping screw	57	chain wheel gasket
17	transparency oil tube	58	split washer
18	fuel tank sealing ring	59	tapping screw
19	filtration spring	60	heat insulation washer
20	breather value	61	dead block
21	fuel tank	62	sealing ring
22	pothook	63	tapping screw
23	fuel tank cap sealing ring	64	tapping screw
24	fuel tank cap	65	tapping screw
25	left cover	66	support plate
26	tapping screw	67	tapping screw
27	tapping screw	68	screw
28	handle	69	chain plate
29	tapping screw	70	chain
30	tapping screw	71	sealing ring
31	left housing cover	72	Circling round subassembly
32	tapping screw	73	adjusting cover
33	impact block cover	74	circlip for shaft
34	impack block	75	adjusting knob
35	protection board	76	rotary knob
36	wind shield	77	blade sleeve
37	tapping screw		

ASSEMBLY DIAGRAM

