


PARST LIST

NO.	PART NAME	QTY
1	Handle	1
2	Holder	2
3	Soap bottle	1
4	Wheel	1
5	Cushion	4
6	Frame	1
7	Shock absorbing block	1
8	Engine	1


ASSEMBLY DIAGRAM

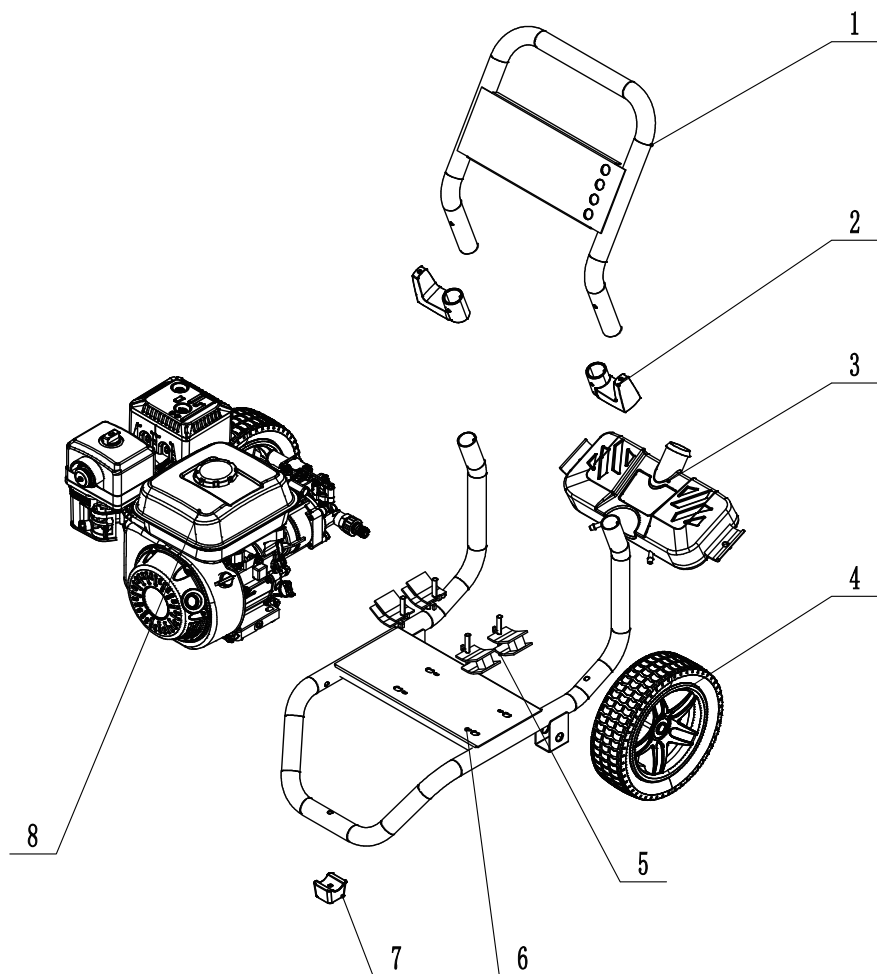

PARST LIST(ENGINE PARTS)

NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	Reset spring(throttle vavle)	1	44	Bolt	6
2	Speed control bracket	1	45	Camshaft parts	1
3	Nut	5	46	Valve tappet	2
4	Cotter pin	1	47	Exhaust valve	1
5	Speed control pendulum	1	48	Intake valve	1
6	Gasket(governor arm)	1	49	Cylinder head gasket	1
7	governing pull rod	1	50	Positioning pins	2
8	Governing spring	1	51	Cylinder head bolts	4
9	Speed control bracket fixing bolts	1	52	Air filter	1
10	Oil control set	1	53	Air filter gasket	1
11	Bolt	4	54	Fuel line clamp	1
12	Recoil starter assembly	1	55	Oil pipe	0.17
13	Bolt	13	56	Carburetor parts	1
14	Flame-off switch	1	57	Carburetor gasket	1
15	Air guide cover (starter cover)	1	58	Carburetor heat shield	1
16	Flywheel nut	1	59	Air inlet gasket	1
17	Starter cup	1	60	Double-ended studs	2
18	Impeller	1	61	Cylinder head	1
19	Flywheel combination	1	62	Double-headed stud	2
20	Oil seal	2	63	Exhaust port gasket	1
21	Bolt	2	64	Muffler parts	1
22	Ignition coil	1	65	Nut	2
23	Bolt	1	66	Cylinder block air guide	1
24	Lower shield	1	67	Spark plug	1
25	Oil drain bolt	2	68	Valve tappet	2
26	Oil drain bolt gasket	2	69	Oil retainer	1
27	Oil alert	1	70	Tappet limit plate combination	1
28	Crankshaft case	1	71	Valve spring	2
29	Locating pin	2	72	Intake valve spring seat	1
30	Deep groove ball bearings	2	73	Exhaust valve spring seat	1
31	Oil sensor	1	74	Valve adjustment cap	1
32	Bolt	2	75	Rocker arm shaft bolt	2
33	Speed control gear parts	1	76	Valve rocker arm	2
34	Connecting rod	1	77	Valve adjusting nut	2
35	Crankshaft components	1	78	Valve lock nut	2
36	Piston	1	79	Cylinder head cover gasket	1
37	Piston pins	1	80	Cylinder head cover assembly	1
38	Piston pin snap ring	2	81	Fuel tank cover	1
39	Piston ring assemblies	1	82	Fuel filter	1
40	Crankcase gasket	1	83	Fuel tank body	1
41	Oil dipstick	1	84	Fuel outlet nozzle	1
42	Crankcase cover power	1	85	Bolts-extended series	1
43	Oil plug	1			

ASSEMBLY DIAGRAM(ENGINE PARTS)

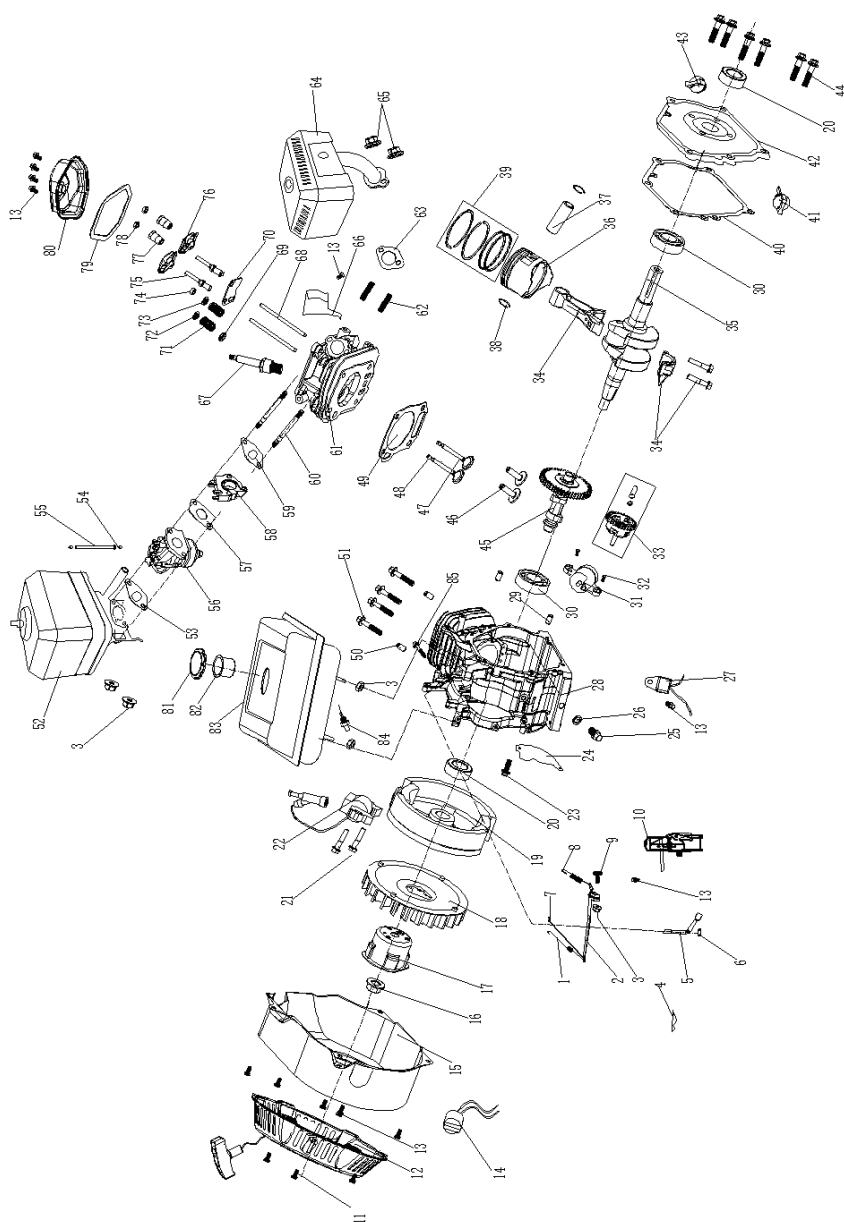

PARST LIST(PUMP HEAD PARTS)

NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	Crankcase	1	38	Steel ball	1
2	Oil seal for crankcase	1	39	O-ring	1
3	Groove ball bearing	1	40	Retaining ring	1
4	Swash plate	1	41	Unloading valve seat	1
5	Ball bearing	1	42	Retaining ring for ejector rod	1
6	Shaft retaining ring	3	43	O-ring for ejector rod	1
7	Spring gasket	3	44	Ejector rod	1
8	Spring	3	45	O-ring	1
9	Plunger	3	46	O-ring	1
10	O-ring	1	47	Retaining ring	1
11	Crankcase cover	1	48	O-ring	1
12	Oil seal	3	49	Ejector seat	1
13	Oil seal gasket	3	50	Spring gasket	1
14	Screw	4	51	Spring	1
15	Water seal	3	52	Spring blockage	1
16	O-ring	3	53	M6 Nut	1
17	Intermediate sleeve	3	54	Rubber cap	1
18	Intermediate retaining ring	3	55	Outlet connector	1
19	Water seal	3	56	O-ring	1
20	Inlet and outlet valve	3	57	Piston	1
21	O-ring	1	58	O-ring for piston	1
22	O-ring for valve	3	59	O-ring for piston	1
23	Inlet safety valve	1	60	Piston blockage	1
24	Pump head	1	61	Spring for outlet valve	1
25	Screw	3	62	Outlet valve head	1
26	O-ring	1	63	O-ring for outlet valve	1
27	Inlet connector	1	64	Limit pin	1
28	Inlet connector filter	1	65	Screw	5
29	Suction hose connector	1	66	Bolt gasket	5
30	O-ring	1	67	Pressure relief connector	1
31	O-ring	3	68	O-ring	1
32	Inlet and outlet valve	3	69	O-ring	1
33	O-ring	3	70	Steel ball	1
34	Screw	2	71	Pressure relief connector spring	1
35	O-ring	1	72	M6 Nut	1
36	Pump head cover	1	73	O-ring for M6 nut	1
37	Blockage	1			

ASSEMBLY DIAGRAM(PUMP HEAD PARTS)

